GENEL / PUBLIC ANADOLU ISUZU




From 2024,

BIG-E





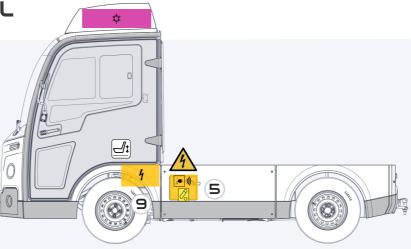

2 1

Air Conditioner

Battery

] Inverter

→ 12 V Battery

S Charge Plug

E-Motor


DC-DC Converter

8 LV Switch

9 Onboard Charger

10 PDU



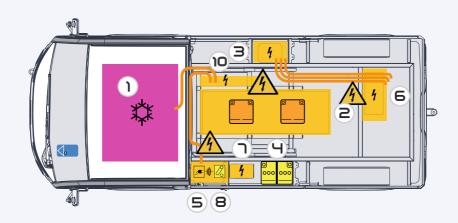



Battery High Voltage



Shutdown Power



Battery Low Voltage



Vehicle Induction Charging



High Voltage Component



Warning, Electricity



Seat Adjustment



High Voltage Power Cable

Air-Conditioner



Left Hand Drive

IDENTIFICATION / RECOGNITION



Electronic Micro Truck With Inductive Charging



Lithium – Ion Battery



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.


| IMMOBILIZATION | LIFTING

-) Choke wheels,
- Put the vehicle in neutral (N) and engage the handbrake.



Lifting points,

Use wheels if it's needed for lifting.

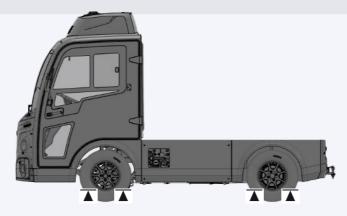

DISABLE DIRECT HAZARDS / SAFETY REGULATIONS





DO NOT ATTEMPT TO OPEN HIGH VOLTAGE BATTERY.




Main Method:

Stop engine via switching off the ignition key then go to the back of the vehicle.

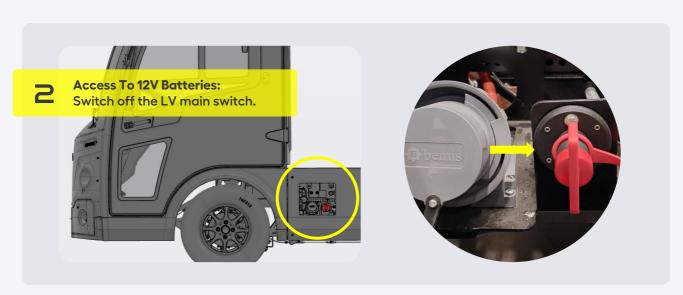


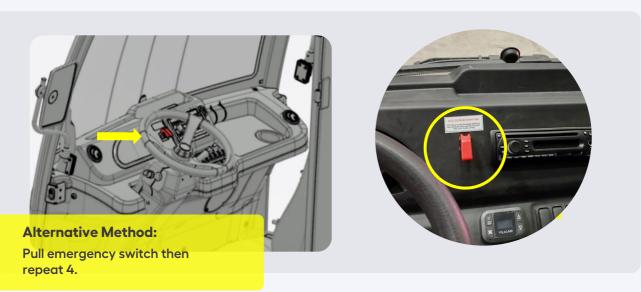

ACCESS TO THE OCCUPANTS

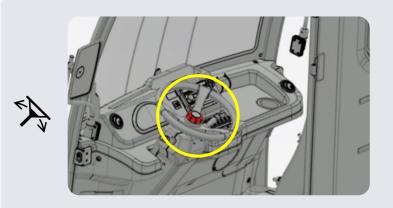



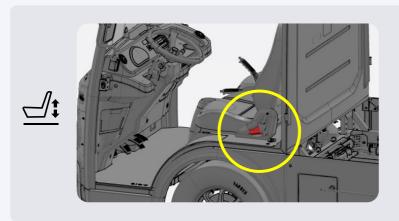



STORED ENERGY / LIQUIDS / GASES / SOLIDS















48 V









12 V (12 V X 2)








0,6 kg

05 IN CASE OF FIRE



Use Large Amount Of Water

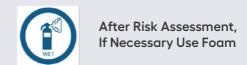



BATTERY RE-IGNITION!



Wear appropriate PPE. Remove the vehicle from the water and continue with normal high voltage (see chapter 3). Vehicles submerged in salt water should be handled with a greater potential risk of a HV battery fire.

Tilt the vehicle to one side to allow water to drain out of the vehicle and the high voltage battery.

TOWING / TRANSPORTATION / STORAGE

